

USER GUIDE

12V 4 Channel Receiver

Purpose: This document outlines the process for pairing your remote, pairing additional remotes or the resetting of your remote.

Pairing your Remote

- 1 Press and hold the receivers '**learning**' button for 5 seconds.
- 2 The LED on the receiver will turn on (light will be solid), indicating the unit is ready for pairing.
- 3 Press and hold any button on the new remote control (e.g. Button A), for 5 seconds, or until light starts flashing.
- 4 The flashing light confirms the pairing was successful.

Pairing Additional Remotes or Resetting Your Remote

- 1 To pair an additional remote, or reset your existing remote, repeat steps 1 to 4, above, with each new remote.



Notes

Replace the remote control battery promptly, if you notice a significant reduction in operation range.

For optimal performance, avoid:

- Metal surfaces or enclosures
- Large equipment
- Areas with strong electromagnetic interference

It is not recommended to operate your remote more than 5 metres from the receiver.